



Universal Clamp Making Tool Kit

CT500

CLAMP
TOOL

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS
IN A READILY ACCESSIBLE LOCATION.

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

CAUTION IMPORTANT: Always wear eye protection when using tool.

1. Cut wire to length (4 times the diameter of the hose plus 12").
Fold wire in half evenly and thread wire nut onto wire ends.



2. With loop towards you, guide wire nut through loop and pull wires through.

3. Separate wires and guide wire nut through the loop again keeping the 2nd loop inside the first (make sure wires are not crossed). Hand tighten and form clamp.

4. Place notch of nose onto the wire loop.

5. Pull excess wire over both pins and wrap wire once around larger pin. Repeat on other side.

FOLD




6. After wrapping wires around both pins, twist the two wires together tightly.


7. Turn the knob clockwise to tighten. As you begin to feel tension, adjust wires to desired position.

8. When tight, pivot the tool over and loosen by turning knob counter clockwise.

9. Remove notch of tool from loop and trim wires leaving about a 1/4" of wire.

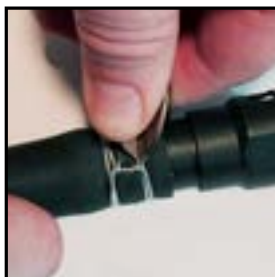

10. Using pliers, push both cut wires inwards to finish clamp.

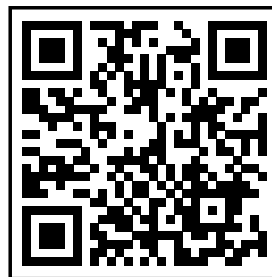

For video instructions, please use QR code or visit:

<https://youtu.be/zNvtDDnz6Wg>